TORQUE REQUIREMENTS FOR VESSELS WITH "0-RING CLOSURE"

Bolted pressure vessel closures operate on the premise that the joint is clamped closed with a force sufficient to resist the internal pressure yet still maintain a seal. The clamping force, or pre-load, is applied by the closure bolts and its magnitude is controlled by the torque applied. Application of the correct preload is essential to maintaining a positive seal and avoiding closure failures from fatigue or overstressed vessel components.

The short term, and most obvious effect of grossly undertorqued bolts is insufficient clamping force resulting in a leaking closure. A more ominous result of under-torqued bolts in systems which see a great number of pressure cycles (such as refuelers, loading racks etc.), is bolt fatigue failure. Repeated applications of stress to the bolt eventually create a small crack at the surface of the bolt which continues to grow until the bolt breaks and the closure fails.

It is a good idea to re-torque the closure bolts after they have been in use for a month or so to ensure the joint has not "relaxed" and the preload reduced.

Over-torquing closure bolts will result in breaking or bending vessel bolt clips or actually breaking the bolt itself. Table One lists guideline torque values for lubricated bolts for common sizes used for vessel closures. Always use lubricated bolts, as this reduces the required torque, improves torque accuracy, and retards corrosion.

TABLE ONE*	
Bolt Diameter mm (in.)	Recommended Torque m-kgs (ft-lb)
13 (1/2)	3 (20)
19 (3/4)	6 (45)
25 (1)	14 (100)
32 (1-1/4)	22 (160)
38 (1-1/2)	36 (260)

*NOTE: These recommended torque values are only for vessels with an O-Ring closure.

A common cause of inaccurate bolt torque is inappropriate bolt torquing procedures. Key elements to the procedure are application of the torque in stages and in a specific crosstorquing sequence. For most applications, torque is applied to all bolts to 30% of full torque, then to all bolts to 60% of full torque, and finally to all bolts to 100% of full torque. Each torquing cycle is carried out in the applicable cross-torquing sequence. Torquing sequences vary with the number of bolts on the cover.

The tightening pattern is as follows: Tighten two bolts diametrically opposite from each other, then tighten a second pair of bolts diametrically opposite each other, approximately 90 degrees away from the first pair, and so on until all bolts have been tightened.

Using a clock as an example, the sequence would be: 12, 6, 9, 3, 11, 5, 10, 4, 7, 1, 8, 2.

On large vessels, the cross-torquing process is tedious but the addition of a second operator applying torque improves the situation vastly.

Correct closure torquing will result in many years of troublefree vessel operation. Occasional inspections for bolt cracks or clip damage is good practice to detect possible closure problems before they occur. More detailed or specific information on bolt torquing requirements and procedures can be obtained by calling +1 719 531 5855.

