



aerospace climate control electromechanical filtration fluid & gas handling hydraulics pneumatics process control sealing & shielding





Guardian® Portable Filtration System





ENGINEERING YOUR SUCCESS.



Ground Support



Hydraulic Service



The Guardian portable filtration system is a unique pump/motor/ filter combination designed for conditioning and transferring petroleum-based and water emulsion fluids. It protects your system from contamination added with new fluid because new fluid is not necessarily clean fluid. Most new fluids right out of the drum are unfit for use due to high initial concentrations of contaminants. Contamination may be added to a new fluid during processing, mixing, handling, and storage.

The Guardian also circulates and "polishes" fluid in your existing systems to reduce the contamination to an acceptable level.

There are literally hundreds of applications that the Guardian is suited for, with more being discovered each day. If your system is sensitive to the harmful effects of contamination, then the Guardian may be ideal for you.

Features	Advantages	Benefits	
Lightweight, hand held, compact design (less than 24 lbs 16" X 8" ap- proximate foot print).	Easy to carry and fits easily on top of 55 gallon drums.	One person operation, capable of getting to hard to reach areas.	
Flow rate to 4 gpm.	Filters and transfers simultaneously.	One step operation.	
Powerful pump/motor combination with Car- boxylated Nitrile seals standard.	Handles fluids up to 16,000 SUS viscosity (11,000 SUS -24 VDC).	Reliable performance in a wide variety of operating conditions.	
Built-in relief valve with no downstream fluid bypass.	Only filtered fluid reaches downstream components.	100% filtration ensured, even when unattended.	
Wide variety of filter elements available.	High capacity 2 micron absolute disposable microglass to 74 micron cleanable wire and water removal.	Maximizes element life between changes.	
Clear, wire-reinforced 5' hose assemblies with wand attachments.	No additional hardware required.	Ready to use and easy to maneuver.	
Optional quick disconnect hose connections.	Fast, easy setup and tear-down.	Eliminates messy drips.	
Heavy-duty ¼ HP, 115 VAC (230 VAC, 24 VDC- optional) motor with thermal overload protection.	UL recognized and CSA listed, with replaceable brushes.	Safe, reliable performance; field serviceable.	
Geroter pump with visible serviceable inlet strainer.	Dirt tolerant design with added protection.	Pump reliability in highly contaminated fluids.	
Quiet operation.	Less than 70dB noise level @ 3 feet.	Can be used most anywhere with minimal disturbance.	
Convenient inlet-to-outlet hose connection.	Contains fluids when transporting.	Clean and safe operation.	
Low center of gravity.	Guardian stability.	Unattended reliability.	Te.
Dual motor seals.	Added motor protection.	Longer motor life.	
Auxiliary inlet/outlet ports.	Used in place of, or in addition to, standard ports. The outlet can also be used as a sampling port.	Flexibility.	

Mobile

Industrial

Marine

Guardian Series

Installation and Specification Data

Maximum Allowable Operating Pressure (MAOP): 50 psi (3.4 bar)

Flow Capacity: Up to 4 gpm (15 lpm)

Maximum Recommended Fluid

Viscosity: (.85 specific gravity) 110-120 VAC and

220-240 VAC	16,000 SUS
24VDC	11,000 SUS

Warning: Explosion hazard. Do not pump flammable liquids such as gasoline, alcohol, solvents, etc.

Operating Temperatures:

Unit: -15°F to 180°F (-26°C to 82°C) Wand/Hose: 25°F to 120°F (-4°C to 49°C)

Visual Indicator: Differential pressure type, set at 25 psid

Recommended Fluids: petroleum based oils, water emulsions, and diesel fuels

Integral Relief Valve: set at 50 psi for motor protection.

Noise Level: <70db at 3 ft.


Electrical Motor: ¼ hp@2500 rpm. 24 VDC; 10A max. 110-120 VAC; 50/60 Hz; 3A max. 220-240 VAC; 50/60 Hz; 1.5A max. Thermal overload protected.

Replaceable brushes (500 hours).

Weight: approximately 23 lbs. 5 oz.

Materials:

Housing: cast aluminum Cover: die cast aluminum Handle and Indicator: nylon Wands and Hose: PVC Fittings: brass Seals: fluorocarbon/ carboxylated nitrile

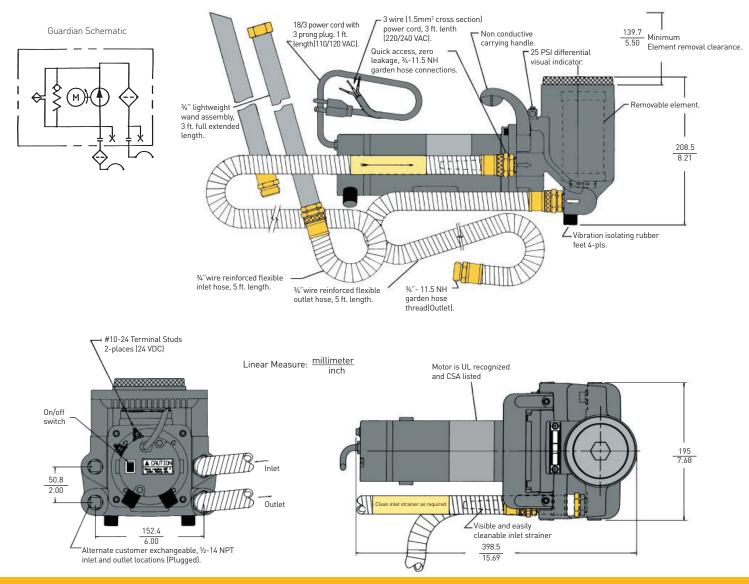

Guardian Series

Element Performance

Media Code	Filter Media	Time Averaged Beta x/y/z =2/20/75 Where x/y/z is:	Dirt Capacity (Grams)
74W	Woven Wire	74 micron ¹	*
40W	Woven Wire	40 micron ¹	*
25W	Woven Wire	25 micron ¹	*
20C	Cellulose	20 micron ¹	*
10C	Cellulose	5/8/16	4
20Q	Microglass III	7.1/13.7/17.3	16.2
10Q	Microglass III	Microglass III 2.7/7.3/10.3	
05Q	Microglass III	<2/2.1/4.0	14.9
02Q	Microglass III	<2/<2/	14.3

Beta Rating	Efficiency at x Particle Size				
$B_x = 2$	50.0%				
B _x = 20	95.0%				
B _x = 75	98.7%				
B _x = 200	99.5%				
B _x = 1000	99.9%				

Multipass test run at 4 gpm to 35 psid

¹Reference ratings only. Not multipass tested due to coarseness.

* Not applicable

Estimated Guardian Element Life and Cleanliness Levels

The following chart shows typical element life (in gallons of oil passed) and cleanliness levels

achieved by standard Parker elements available with the Guardian. Some assumptions have been made.*


Media Code	New Oil ISO	ISO Achieved	Elements Used per 250 gallons	
10C	22/20/16	21/19/15	120 gallons	2.08
20Q	22/20/16	21/19/15 486 gallons		.51
10Q	22/20/16	19/16/14 407 gallons		.61
05Q	22/20/16	17/15/12 330 gallons		.75
02Q	22/20/16	15/13/10 316 gallons		.79

* 1. New oil is at ISO 22/20/16.

2. No environment or work ingression.

3. Single pass oil transfer.

NOTE: Data for fluid transfer only. For continuous fluid polishing, lower ISO cleanliness levels will be achieved.

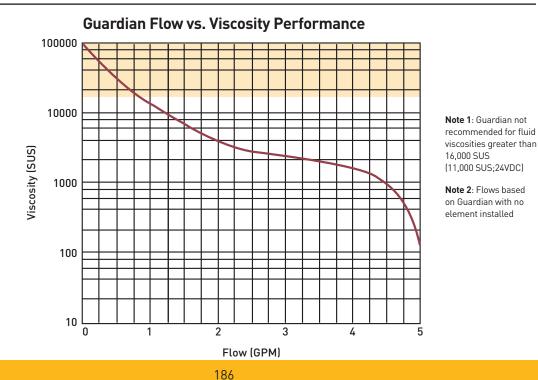

Guardian Operation


- A. Remove all shipping plugs from the hoses and fittings.
- B. Connect the inlet and outlet hose assemblies to the unit.
- C. Connect the wand assemblies, if required.
- D. Place the inlet hose wand assembly into the fluid to be filtered and/or transferred.
- E. Place the outlet hose/wand assembly into the container where the fluid discharge is desired.
- F. Plug in the unit.
- G. Flip the switch on the end of the unit to the "on" position.
- NOTE: For no-mess transportation, the inlet and outlet hose assemblies can be screwed together by removing the wand assembly.

Guardian Element Servicing

- A. Flip the switch on the end of the unit to the "off" position and disconnect the electrical plug.
- B. Rotate the cover counter-clockwise and remove.
- C. Remove the element from the housing. Discard all
- disposable elements. These elements are not cleanable, D. Place the new element In the housing, fitting the o-ring neck into the large hole at the bottom.
- E. Inspect the cover o-ring and replace if necessary.
- F. Replace the cover and hand-tighten.
- NOTE 1: It is recommended that the Guardian be cleaned and flushed between uses with dissimilar fluids to prevent fluid mixing.
- NOTE 2: Motor brushes may require changeout every 500 service hours

Troubleshooting Guide

Problem	Cause	Solution
Does not start.	ON/OFF switch. No electrical power. Rectifier. Motor overheats (160°F). Defective motor.	Turn switch on, replace switch if defective. Plug in Guradian, check for tripped circuit breakers, check for blown fuses. Replace if defective. Allow motor to cool, thernal overload will automatically reset. Replace motor.
Does not start or errattic motor noise.	Worn motor brushes.	Replace motor brushes.
Intermittent start.stop oera- tion.	High viscosity fluids. Worn motor brushes. Defective motor.	High viscosity fluids can cause the motor to overheat and cycle intermittently. Replace motor grushes. Replace motor.
Hot motor.	Pumping under heavy load. Defective motor.	It is normal, under a heavy pumping load for the motor to reach 160°F. Replace motor if shell temperature reaches greater than 170°F.
No flow or erratic pump noise.	Filter housing not filled with oil. Suction leak. Obstructed outlet. Element dirty. Sheared pump key. Defective Guardian.	Allow Guardian to run a few seconds. Check tghtness of inlet fittings and hoses. Check gaskets are in place and are not damaged. Kink or restriction in the inlet hose. Clear outlet. Replace or clean element. Replace woodruff key. Replace unit.
No flow, erratic pump noise, motor overheats.	Gears binding.	Disassemble Guardian and throroughly clean the gear set. Always use the inlet strainer provided to protect the unit. Replace defective gears.
No suction.	Plugged strainer.	Clean or replace the inlet strainer as required. Clean relief valve. Check for damaged internal o-rings.
Reduced oil flow.	High viscosity fluids. Element dirty. Relief valve sticks or is lodged open. Partially obstructed inlet or outlet hose. Suction leak. Worn gears.	High viscosity fluids can cause reduced flow, which is normal. Replace or clean element. Clean releif valve or replace if defective. Clear the hose obstruction. Check tightness of inlet fittings and hose. Replace gear set.
Indicator moves to RED Area.	Element dirty. Oil extremely cold or viscous. Obstruced outlet. Defective indicator.	Replace or clean element. Change element to coarser micron rating. Clear outlet obstruction. Replace indicator.
Indicator dows not seem to move.	No element. Defective indicator.	Install element. Replace indicator.
Joses discolor or are hard.	Fluid compatibility.	Certain fluids, over time, will cause the hoses to discolor. This does not impair their performance. But, some fluids will cause the hoses to become brittle, requiring replacement.
Oil formation under unit.	Defective shaft seal.	Replace the motor shaft seal.

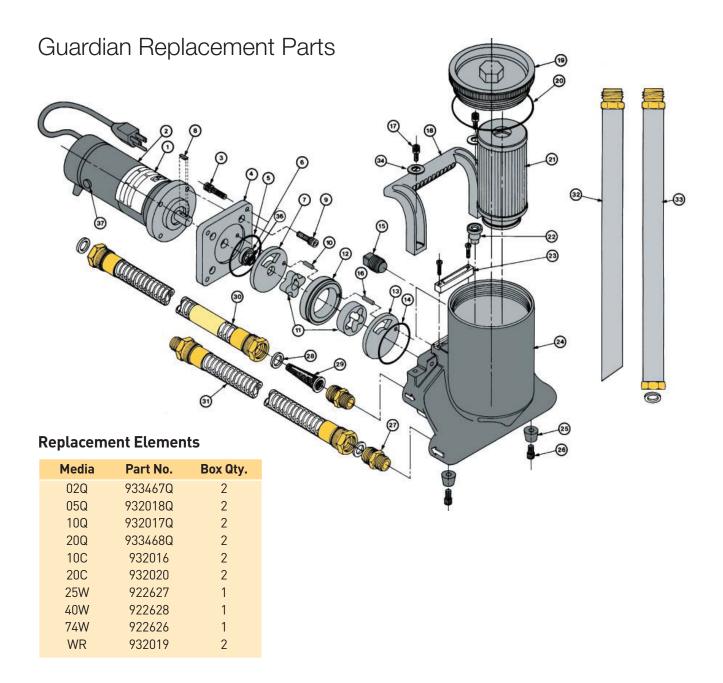

Parts List

1. Label Consult Factory
2. Motor, 110-120 VAC931913
220-440 VAC
24 VDC932759
3. SHCS(4), ¹ / ₄ -20x1902734
4. Adapter Plate
5. Housing O-Ring
6. Polypak Seal
7. Shadow Plate
8. Woodruff Key ¹ / _{8×3} / ₈ 931877
9. SHCS(4), ¹ / ₄ -20 × ³ / ₄
10. Roll Pin ¹ / _{8 ×} ³ / ₄
11. Geroter Set931873

12. Geroter Ring
13. Outlet Plate
14. Geroter O-ring
1 5. Brass Pipe Plug (2) ½-14 931920
16. Roll Pin ¹ / _{8 × 5} / ₈
17. SHCS (2), ¹ / ₄ -20 × ⁵ / ₈
18. Handle
19. Cover
20. Cover O-RingV72237
21. Element
22. Relief Valve
23. Indicator Kit
24. Housing

25. Rubber Bumpers (2) 931888
26. SHCS(2), 1/4-20 x 1/2
27. Brass Fitting (2)931928
28. Gasket (4)
29. Inlet Screen
30. Inlet Hose Assembly931936
31. Outlet Hose Assembly931937
32. Wand Crevice Assembly931965
33. Wand Adapter Assembly 931966
34. Washer (2)
35. Quick Disconnect Kit 932097
(Not Shown)
36. Washer932085
37. Brush Kit (110/120)
(220/240 VAC)934327
(24 VDC)932761
Seal Kit
Bowl Extension Kit932081

NOTE: SHCS denotes "socket head cap screw"

Guardian Series

How to Order

Select the desired symbol (in the correct position) to construct a model code. Example:

	BOX 1		BOX 2		BOX 3			BOX 4
			GT4		10 <i>C</i>			1
BOX 1: Seals Symbol Description		BOX 3: Media Symbol Description		BOX 4: Options Symbol Description				
None	Carboxylated Nitri (Standard)	le	74W Wire Mesh		1		None	
Note: Consult factory for fluids not compatible with fluorocarbon.		40W 25W	Wire	Mesh Mesh	6		Quick disconnect hose connections	
			10C		ulose			
BOX 2: M	lodel		20Q		oglass III			
Symbol	Description		10Q	Micr	oglass III			
GT4	Guardian [®] 110/120	VAC	05Q	Microglass III				
GT4D 24VDC		02Q	Micr	oglass III				
		WR	Wate	er Removal				
GT4E	220/240 VAC							

Please note the bolded options reflect standard options with a reduced leadtime. Consult factory on all other leadtime options.

