


CARTRIDGE CHANGEOUT CURVE SPENT CARTRIDGES AT REDUCED FLOWRATES

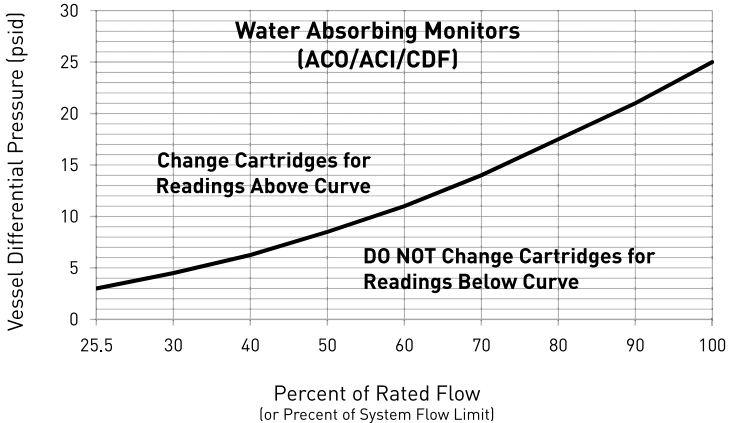

EXAMPLE: A 600 GPM vessel is operating at 300 GPM (50% of system flow limit). When the pressure differential reads less than 8 psid, the cartridges do not require changing. Should the pressure differential read 8 psid or higher, or if the cartridges have been in service for one year, the cartridges are due for changeout.

For ATA103 Compliance please use decal 1979, Cartridge Changeout Curve for 15 psid changeout.

Parker Hannifin Corporation
Filtration Group
Velcon Filtration Division
1210 Garden of the Gods Road
Colorado Springs, CO 80907 USA
vfsales@parker.com www.velcon.com



VEL1846R8-0614